

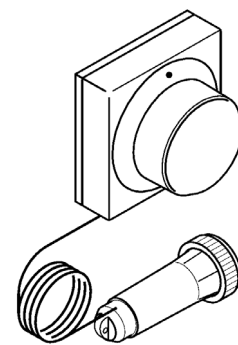
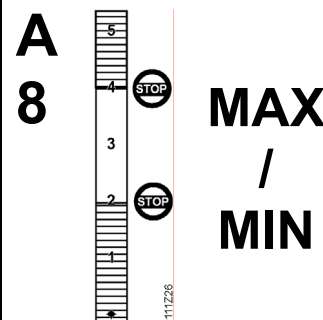
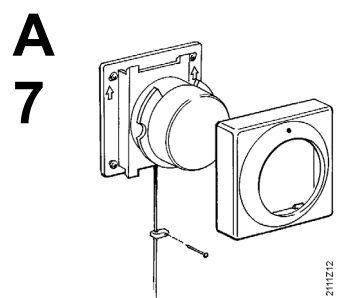
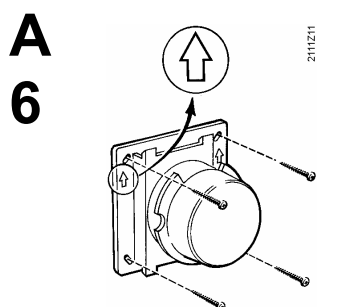
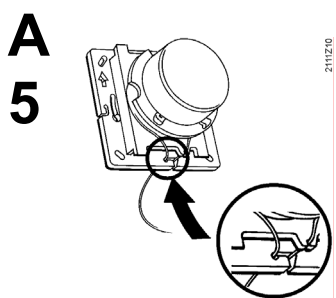
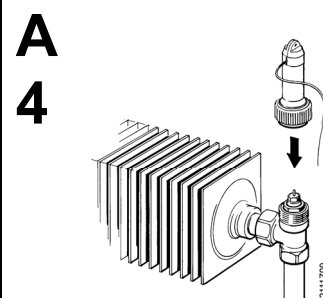
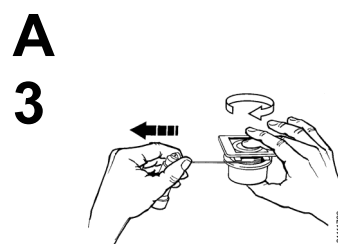
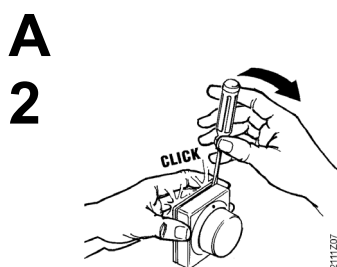
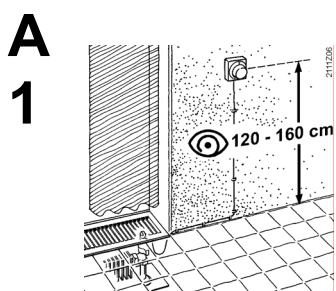
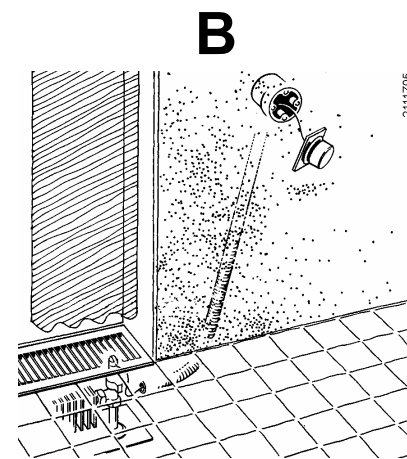












- de** Montageanleitung
- en** Mounting instructions
- fr** Instructions de montage
- sv** Monteringsinstruktion
- nl** Montage-handleiding
- it** Istruzioni di montaggio
- fi** Asennusohje
- es** Instrucciones de montaje
- da** Monteringsvejledning
- pl** Instrukcja montażu
- cz** Montážní návod
- hu** Szerelési útmutató
- el** Οδηγίες εγκατάστασης
- zh** 安裝指導

**Heizkörperthermostat mit Fernversteller**  
**Radiator thermostat with remote adjuster**  
**Robinet thermostatique avec commande à distance**  
**Radiatortermostat med fjärrinställning**  
**Thermostatische radiatorregelaar met instelling op afstand**  
**Comando termostatico remoto per radiatore**  
**Kaukosäädöllä varustettu radiaattoritermostaatti**  
**Termostato para radiador con cursor remoto**  
**Radiatortermostat med fjernjustering**  
**Termostat grzejnikowy z zdalnym zadajnikiem**  
**Termostatický regulátor topného tělesa s dálkovým ovládáním**  
**Termosztatikus fej távállítási lehetőséggel**  
**Θερμοστατική κεφαλή σωμάτων με απομακρυσμένο χειριστήριο**  
**帶远程调节的恒温阀调温器**

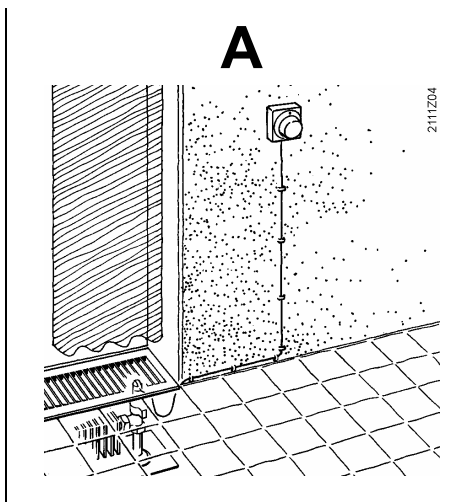

**RTN81**

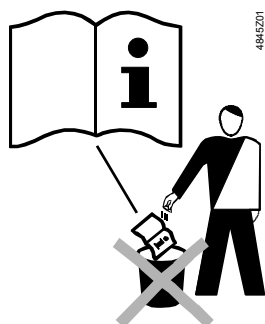

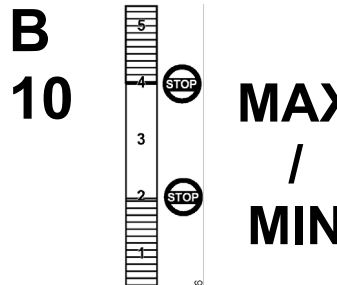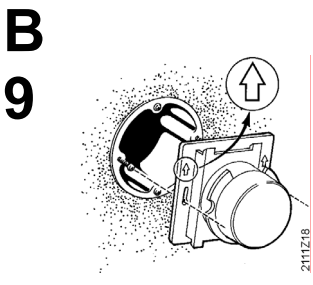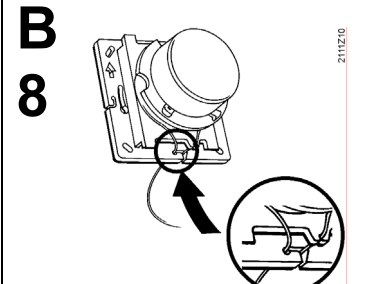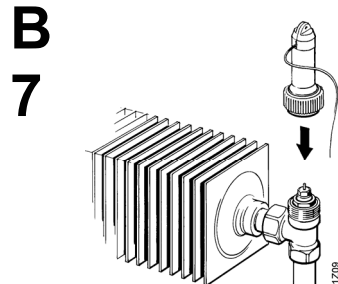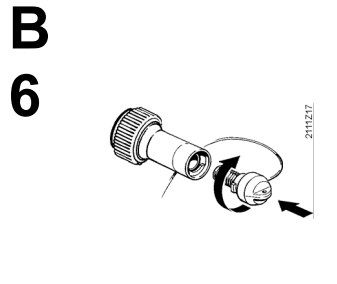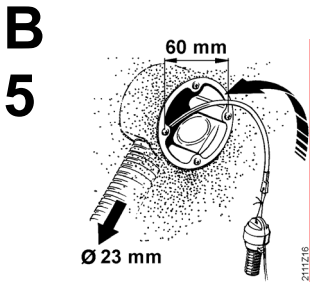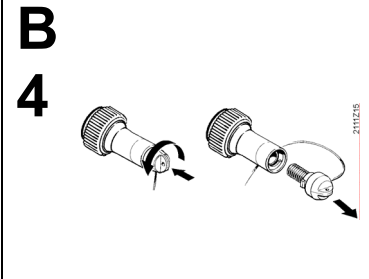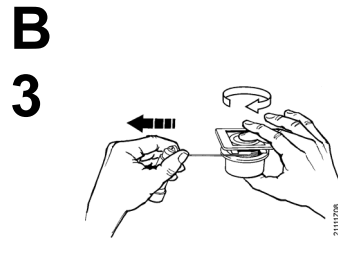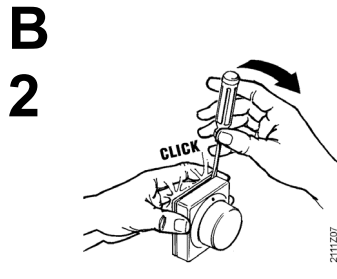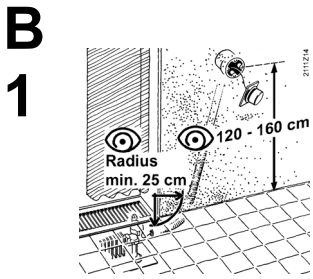

**MAX / MIN**

